 


This item is TÜV certified.

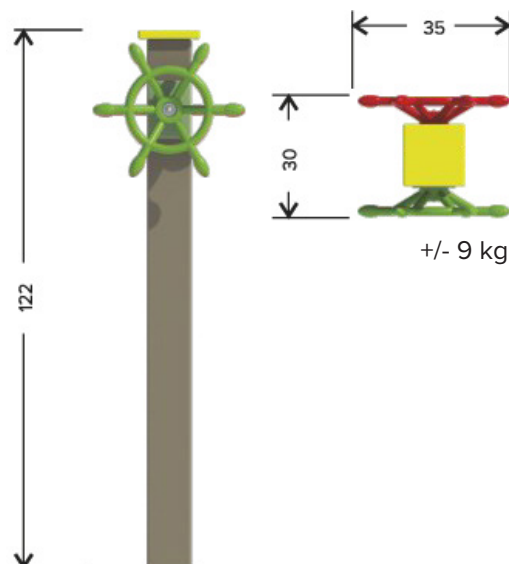

Mounting

The equipment is delivered fully assembled and requires no extra mounting. Anchoring in the ground is required.

Materiaalgebruik

- Solid boards made of recycled plastics (PE) coloured throughout (beige, green, brown)
- Stainless steel screws and nail plugs
- Virgin sheet material (PE)
- 2 replaceable helms (helms)

Maintenance

The plastic material requires very little maintenance, that is cleaning with soapy water and a sponge or soft brush and rinsing with water to remove dirt and soap. As the materials' water absorption is less than 0.29%, it will not get stained by oil, grease or other products. Moss and algae will not adhere easily and can easily be removed. Cleaning with high-pressure (max. 100 bar) is possible but not recommended and mostly even not necessary. Spray with a fan-shaped jet with minimum 30 cm distance from the surface. Painting or staining is useless as the material does not need extra protection and moreover the paint will not stick to the plastic.

Inspection Requirements

Visual inspection:

Weekly or monthly, depending on the intensity of use.

Functional inspection:

Monthly or four-monthly, depending on the intensity of use.

Detailed inspection:

Yearly

Special attention during functional or detailed inspection:

- Check all parts are tight.
- Check worn, loose, damaged, missing parts.
- Check screws sticking out.
- Check anchoring on hard soil.
- Helms must be tightly secured.
- Vandalism?
- Is there play on the helms?

Use original Govaplast parts when repairing is required, to ensure the TÜV certificate remains valid.

Security Zone

 
 
An obstacle-free area of minimum 150 cm around the equipment is required. The security zones of several of these items may overlap.

No fall absorption surface required

The equipment's fall height is less than 60 cm and can be anchored in hard ground. See below for instructions on anchoring in loose ground (sandpit, wood chips, bark mulch etc.)

Anchoring is required

Anchoring is done as illustrated with conical foundation of stabilized sand. The level mark on the post indicates the ground level.

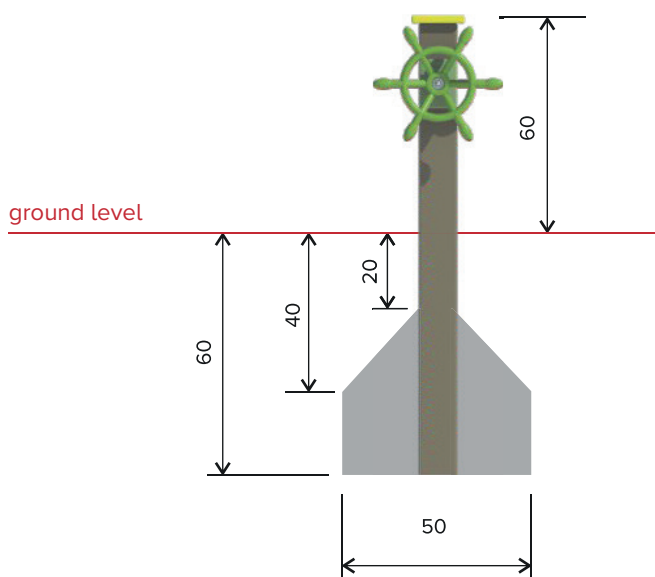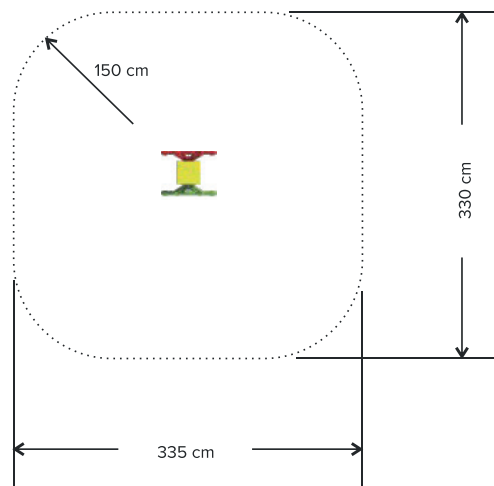

Replacement helms

Through intensive use, the plastic mechanism in the helms is subject to wear. The wearing of the helm and the other plastic parts, causes play on the system involving necessary replacement after a few years.

The helm can't come loose from the green plastic mounting plate, as the cap nut is permanently glued onto the metal shaft. Replacing the whole system is not difficult though, as the green plastic mounting plate together with the helm can be unscrewed from the post and a new steering system can be screwed.

